


**SIDE WINDOW LOCK**  
 FOR USE ON DOUBLE HUNG OR WOOD CASEMENT WINDOWS TO HOLD WINDOW OPEN AT DESIRED POSITION. IDEAL FOR WINDOWS IN WHICH AIR CONDITIONER IS INSTALLED.

**INSTALLATION INSTRUCTIONS**

**TOOLS REQUIRED:**  
 Drill,  $\frac{3}{32}$ " drill bit,  
 Phillips screwdriver, awl  
 or pencil.

1. Place window lock flat on window frame (A) in retracted position  $\frac{1}{16}$ " away from window rail (B) and approximately 6" from window sill.
2. Mark, drill pilot holes and secure.

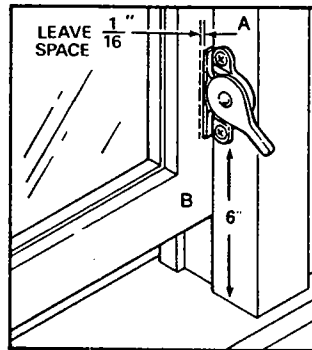

**NOTE:** Two side window locks are recommended per window.

**ASK FOR OTHER FINE HARDWARE BY H.B. IVES**



**WINDOW LOCKS**



**DOOR STOPS**



**COAT & HAT HOOKS**



**DOOR BOLTS**



SIDE WINDOW LOCK C90R3 BRASS

MADE IN USA